



HOOKY
HEAD

GUIDE UTILISATEUR
USER GUIDE

HOOKY

Vous faites désormais partie du Club Hooky.
Hooky conjugue simplicité, design, innovation
et plaisir pour une expérience unique.
Plus que jamais, l'esprit Hooky demeure dans
sa volonté de transcender les codes.
Si révolutionner la chicha électronique est
notre ambition, votre plaisir reste notre fierté.

“

***Si révolutionner
la chicha
électronique
est notre
ambition ...***

”

TABLE DES MATIÈRES

Précautions d'emploi	6
Garantie	7
Remplir la Hooky Head	8
Remplacer la bougie	10
Vue d'ensemble	12
Caractéristiques	13
Utilisation	14
Recharge	15
Conseils d'utilisation	16

PRÉCAUTIONS D'EMPLOI

La Hooky est interdite aux mineurs.

Nous déconseillons l'utilisation de la Hooky aux femmes enceintes, aux personnes cardiaques, aux personnes souffrant de troubles respiratoires et aux personnes fragiles. En cas de réaction allergique, consultez votre médecin. La Hooky ne doit pas être utilisée au volant, cela diminue votre concentration et augmentent les risques d'accident.

Utilisez le chargeur à l'intérieur et dans un endroit sec exclusivement. Ne jamais démonter ni modifier une pièce du chargeur. Une mauvaise utilisation peut endommager la Hooky.

Pour plus d'informations, consultez notre site : www.hooky-shisha.com

GARANTIE



Hooky vous offre une garantie d'un an (1) à compter de la date d'achat, pour autant que la Hooky ait été achetée chez un revendeur agréé. La garantie couvre les défauts de matériaux, de fabrication et les pannes.

Cette garantie ne couvre pas:

- le remplacement des consommables
- les dommages dus aux manipulations erronées
- une utilisation non conforme ou une dégradation
- les défauts et leurs conséquences dus à l'intervention d'un réparateur non agréé
- les défauts et leurs conséquences liés à toute cause extérieure



Pour bénéficier de la garantie, vous devez envoyer une demande de prise en charge en utilisant le formulaire de contact disponible sur notre site.

REEMPLIR LA HOOKY HEAD

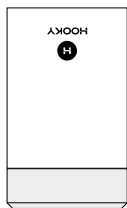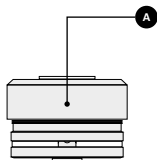



Retournez la
Hooky Head

Dévissez
le couvercle **A**

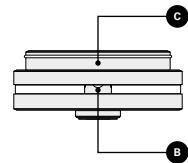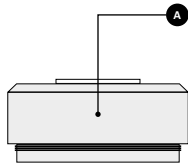



Séparez le réservoir **B**
du couvercle **A**

Dévissez le bouchon **C**
du réservoir **B**

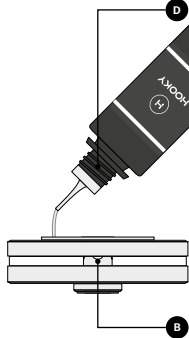

Versez le parfum **D**
dans le réservoir **B**


Revissez le bouchon **C**
du réservoir **B**

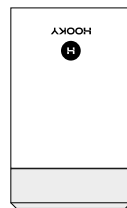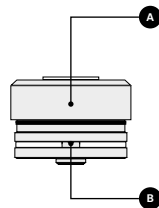

Remplacez le réservoir **B**
dans le couvercle **A**


Revissez le
couvercle **A**

REEMPLACER LA BOUGIE

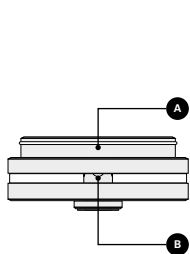


Repérez le sens
du réservoir

- A** Bouchon
- B** Bougie

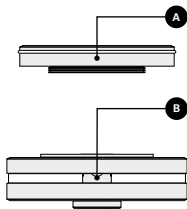


Dévissez le bouchon **A**


Dévissez la bougie **B**

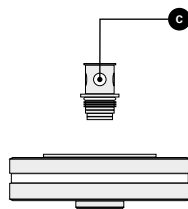

Vissez la nouvelle
bougie **C**

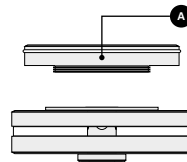

Revissez le bouchon **A**

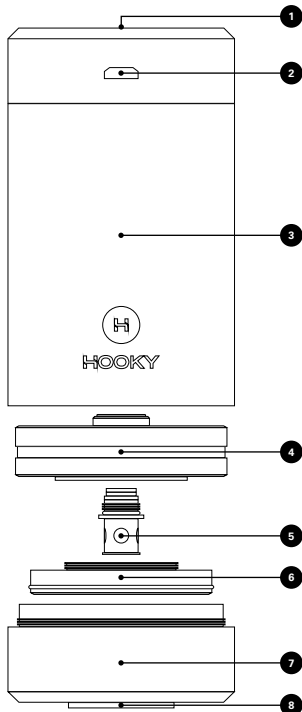

VUE D'ENSEMBLE

- 1 Témoin lumineux
- 2 Port micro USB
- 3 Batterie
- 4 Réservoir
- 5 Bougie
- 6 Bouchon
- 7 Couvercle
- 8 Joint

CARACTÉRISTIQUES

Dimensions	h 122 mm / Ø 60 mm
Poids	404 g
Matériaux	Aluminium
Contenance réservoir	25 mL
Bougie	0.4 Ohm en aludirome
Puissance	40 W
Type de batterie	18650 Li-ion
Capacité - Voltage	6600 mAh - 3.6V / 4.2V
Autonomie	Env. 6h

UTILISATION

Une fois le remplissage effectué (pages 8/9), logez la Hooky Head à l'aide du joint intégré **8** sur votre narguilé de type "mâle".

Les narguilés de type "femelle" nécessitent un adaptateur (non fourni).

Inspirez par le biais du tuyau de votre narguilé, le témoin lumineux **1** s'allume pour indiquer le fonctionnement. Votre session peut commencer!


Ne soufflez pas dans votre tuyau. L'eau contenue dans le vase risque de noyer le circuit électronique et provoquer un dysfonctionnement définitif. Non pris en charge par la garantie.

Pour éviter la surchauffe, chaque inspiration est limitée à 10 secondes.

Dans le cas où le témoin lumineux **1** :

- clignote 3 fois, consultez la FAQ sur notre site.
- clignote 5 fois, rechargez votre Hooky.

Pour des conseils liés à l'utilisation, référez-vous aux pages 16/17.

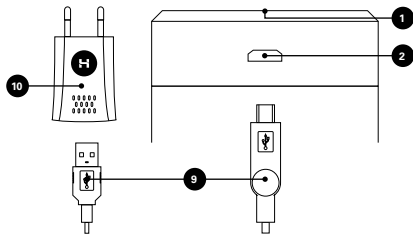

RECHARGE

La Hooky est inutilisable pendant le chargement.

Branchez le câble **9** au port micro USB **2** de votre Hooky Head et reliez-le à l'adaptateur secteur **1** ou à un port USB.

Le début du cycle de chargement est indiqué par la rotation continue du témoin lumineux **1**.

En moyenne, le témoin lumineux **1** se fige après 5h indiquant la recharge complète. L'autonomie varie en fonction de l'utilisation.

Les protections de sécurité empêcheront la surcharge. La batterie a un nombre de cycles de charge limité.

CONSEILS D'UTILISATION

Suivez ces quelques conseils, pour une bonne utilisation de la Hooky Head.

En cas d'inutilisation prolongée, gardez le réservoir à l'extérieur de la Hooky Head pour éviter toute fuite éventuelle.

Assurez-vous d'une présence de parfum dans le réservoir afin de ne pas endommager la bougie et provoquer un goût désagréable.

La bougie étant un consommable, vous devez la remplacer lorsque vous observez une diminution de la vapeur ou du goût.

Vérifiez bien lors du changement de bougie que votre réservoir ne contient plus de parfum. Référez-vous aux pages 10/11 pour assimiler les bons gestes à reproduire pour remplacer la bougie.

Pour éviter des mélanges de parfums non désirés, utilisez un réservoir par parfum ou nettoyez le réservoir à l'eau, en prenant soin de retirer la bougie et de laisser un temps de séchage.

Vous avez la possibilité de mélanger les parfums Hooky et de créer des cocktails créatifs.

Il est formellement interdit de plonger la Hooky Head dans l'eau, vous risquez de noyer le circuit électronique et provoquer un dysfonctionnement définitif. Non pris en charge par la garantie.

Nous vous recommandons d'utiliser uniquement les parfums Hooky.

Leur composition a été spécialement conçue pour répondre aux attentes des consommateurs de narguilé et pour un fonctionnement optimal de la Hooky Head.





Nous vous encourageons à effectuer des charges et décharges complètes afin d'augmenter la durée de vie de la batterie.

Pour plus d'informations, consultez notre site : www.hooky-shisha.com

“

*... votre plaisir
reste notre fierté*

”

-  snapchat: hookyshisha
-  [instagram.com/hookyshisha](https://www.instagram.com/hookyshisha)
-  [facebook.com/hookyshisha](https://www.facebook.com/hookyshisha)
-  twitter.com/hookyshisha

You are now part of the Hooky Club.

Hooky is the result of a harmonious combination of elegance, simplicity and modernity.

Today more than ever, our philosophy remains to maintain an “avant-garde” spirit.

If the revolution of the electronic shisha is our ambition, your pleasure is our pride.

“

*If the revolution
of the electronic
shisha is our
ambition ...*

”

CONTENTS

Precaution for use	24
Warranty	25
Filling the Hooky Head	26
Replacing the spark element	28
Overview	30
Features	31
Usage	32
Charging	33
Usage tips	34

PRECAUTION FOR USE

The Hooky is prohibited for anyone under 18 years of age.

We strongly advise against the use of Hooky by pregnant women, people with heart conditions or respiratory problems. In case of allergic reaction, consult your doctor immediately.

The Hooky should not be used while driving, it reduces your concentration and increase the risk of accidents.

Use the charger indoors and in a dry location only. Never disassemble or alter any part of the charger or the battery. Improper use can cause equipment damages.

More information, visit our website:
www.hooky-shisha.com

WARRANTY



The Hooky warranty is for a period of one year (1) commencing on the date of purchase, provided that the Hooky has been purchased from an authorized dealer. The warranty covers defaults of materials or manufacturing and failures.

This warranty does not cover:

- replacing consumables / accesories
- damage due to incorrect use
- improper use or degradation
- defects and their consequences due to the intervention of a non-authorized repairer
- any damages related to external causes



To obtain warranty service, you must send a request for support by using the contact form available on our website.

FILLING THE HOOKY HEAD

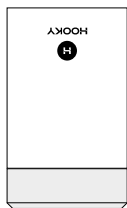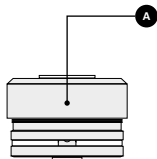



Turn the Hooky Head
upside down

Unscrew the Lid **A**

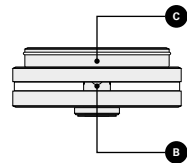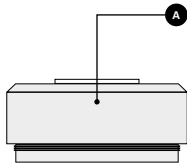



Separate the tank **B**
from the Lid **A**

Unscrew the cap **C**
from tank **B**

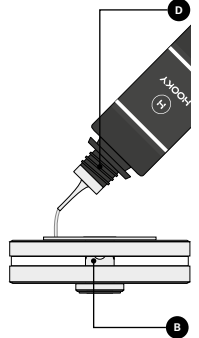

Pour the flavor **D**
inside the tank **B**


Screw back the cap **C**
from the tank **B**

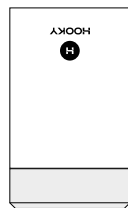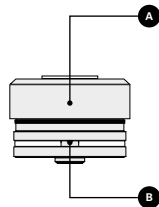

Put back the tank **B**
on the Lid **A**


Screw back the lid **A**

REPLACING THE SPARK ELEMENT

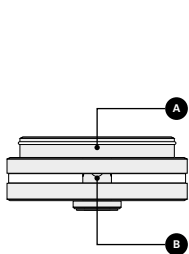


Mark the direction
of the tank

- A** Cap
- B** Spark element

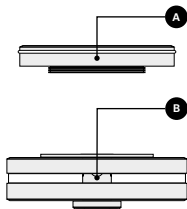


Unscrew the cap **A**


Unscrew the spark
element **B**

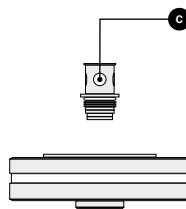

Screw the new spark
element **C**

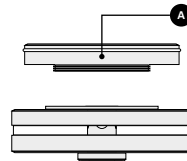

Screw back the cap **A**

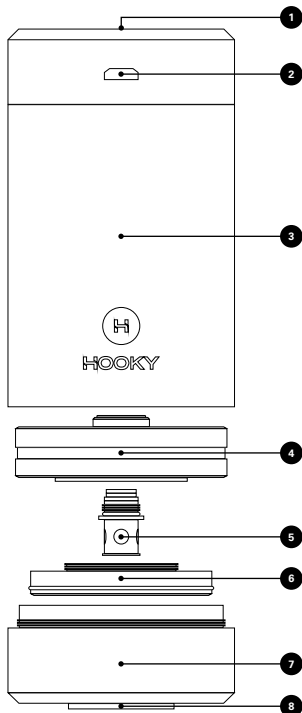

OVERVIEW

- 1 LED indicator
- 2 USB port
- 3 Battery
- 4 Tank
- 5 Spark element
- 6 Cap
- 7 Lid
- 8 Joint

FEATURES

Dimensions	h 122 mm / Ø 60 mm
Weight	404 g
Body material	Aluminium
Tank capacity	25 mL
Spark element	0.4 Ohm in aludirome
Power	40 W
Battery type	18650 Li-ion
Capacity / Voltage	6600 mAh - 3.6V / 4.2V
Autonomy	Aprox. 6h

USAGE

Once the body is filled (pages 26/27), seal the Hooky with the plastic joint **8** on your shisha "male type". The shisha "female" type requires an adapter (not supplied).

Inhale through your shisha hose, the LED indicator **1** will light to indicate it is in operation. Your shisha session can now begin!


Do not blow into your hose. The water in the vase may provoke a flooding on electronic parts and cause irreversible damage. Not supported by the warranty.

In order to prevent overheating, every breath is limited to 10 seconds.

In the case where the LED indicator **1** :

- flashes 3 times, check the FAQ on our website
- flashes 5 times, please put the hooky device into charge.

For guidance related to the use, refer to page 28/29.

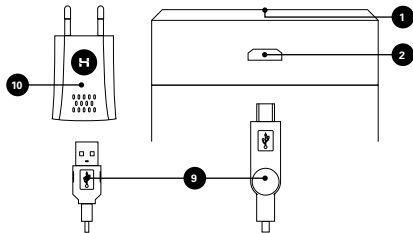

CHARGING

The Hooky Head cannot be used whilst charging.

Connect the USB cable **9** to the micro USB port **2** on Hooky Head and connect it to the USB Wall adapter **10** or to a USB port. The charging cycle is indicated by the continuous rotation of the LED indicator **1**.

The LED indicator **1** will freeze at around 5h to indicate full charge. The autonomy varies according to use.

Safety security prevents overcharging. The battery has a limited number of charge cycles.

USAGE TIPS

Follow this useful tips listed below for a proper of Hooky Head.

In case of you don't use the hooky head for an extended period, keep the tank out of it to prevent any leakage.

Make sure to have liquid in the tank when using the hooky head to avoid damages of the spark element and getting unpleasant taste.

The spark element is a consumable. It must be replaced when you notice a decrease in the vapour or taste.

Make sure when changing the spark element that your tank does not contain flavour.
Refer to pages 28/29 to assimilate the good gesture when replacing the spark element.

To avoid unwanted mixtures flavour, use one flavour per tank or clean the tank with water, taking care to remove the spark element and leave a drying time.

You can blend the hooky flavours together and create your own mixed cocktails.

It is strongly forbidden to put the hooky head into the water, you could damage and drown the electronic circuit and cause permanent dysfunction. Not covered by the warranty.

We recommend using only hooky liquid flavours. They have been specially designed hookah consumer and for optimum performance.





We advise you to make full charges and discharges in order to increase the lifetime of the battery.

For more information, visit our website:
www.hooky-shisha.com

“

*... your pleasure
is our pride.*

”

-  snapchat: hookyshisha
-  [instagram.com/hookyshisha](https://www.instagram.com/hookyshisha)
-  [facebook.com/hookyshisha](https://www.facebook.com/hookyshisha)
-  twitter.com/hookyshisha



HOOKY